



White Knight

Fridge & Appliance Finish Fact Sheet

White Knight Fridge & Appliance Finish reproduces the look of new appliances. It provides a tough durable finish that is ideal for restoring fridges, freezers and washing machines. The acrylic enamel formulation means that it will not yellow.

Preparation

The surface must be thoroughly cleaned and free from grease, oil, dirt, polish, soapy films, rust scale and other contaminants. Sand previously painted or glossy surfaces with 600# wet n dry abrasive paper. Clean and allow to dry before painting

BEFORE SPRAYING

Cover all necessary areas to protect from overspray. It is essential to shake the can for at least one minute after mixing ball rattles to ensure product uniformity. Shake occasionally during use. Do not use when the air or surface temperature is below 15°C or above 30°C or in excessive humidity.

Application Details

Spray outside or in a well ventilated area away from fire and heaters. Test spray first on a small inconspicuous area to ensure surface compatibility and finish suitability. Hold the can upright approximately 15-20 cm from the surface. Press button firmly. Spray with a smooth sweeping motion.

Apply a pre-wetting mist coat followed by a full even coat. Overlap each spray pass. Repeat if necessary. To prevent paint sagging, avoid spraying too close to the surface or spraying too heavy a coat. After Spraying: To clean the nozzle after use and prevent blocking, turn the can upside down and press button until only gas escapes.

Coverage

Up to 1 - 1.5 square metres per unit depending on the nature of the surface and the amount of overspray.

Drying Times

Touch dry 15 minutes. Re-Coat: After 1 hour. Drying times will be slower in cold or humid conditions, in the absence of ventilation or where heavy film builds are applied.

Clean Up

Overspray can be removed while still wet with Rust Guard Solvent or mineral turps.

Pack Sizes

300g Aerosol Available in White, Vanilla, Black and Silver

Health and Safety

Refer to Material Safety Data Sheet available by request on 131 686.

HANDY HINT

To remove a child proof cap insert a screwdriver in the cap and lever it up

The horizontal setting is used when spraying up and down and press button until only gas escapes.

To clean nozzle after use and prevent blocking turn the can upside down and press button until only gas escapes.

Got more questions? Need help? Want a brochure? Any comments or suggestions on the site?

If you have any comments or questions on the White Knight range or want more information we are here to help.

Contact Us

Customer Care Advisers

Phone 131 686

Fax 1800 676 756

Opening Hours: Mon-Fri 8am to 7pm EST, Sat/Sun 9am to 4pm EST

Email info@whiteknightpaints.com.au